



3rd Clutch Transmission Fluid Pressure Switch Replacement

1. Raise the vehicle up on a lift, or apply the parking brake, block the rear wheels, and raise the front of the vehicle. Make sure it is securely supported.
2. Remove the splash shield.
3. Disconnect the 3rd clutch transmission fluid pressure switch connector, and remove the switch.
4. Install the new 3rd clutch transmission fluid pressure switch (A) and a new sealing washer (B), and tighten the switch.

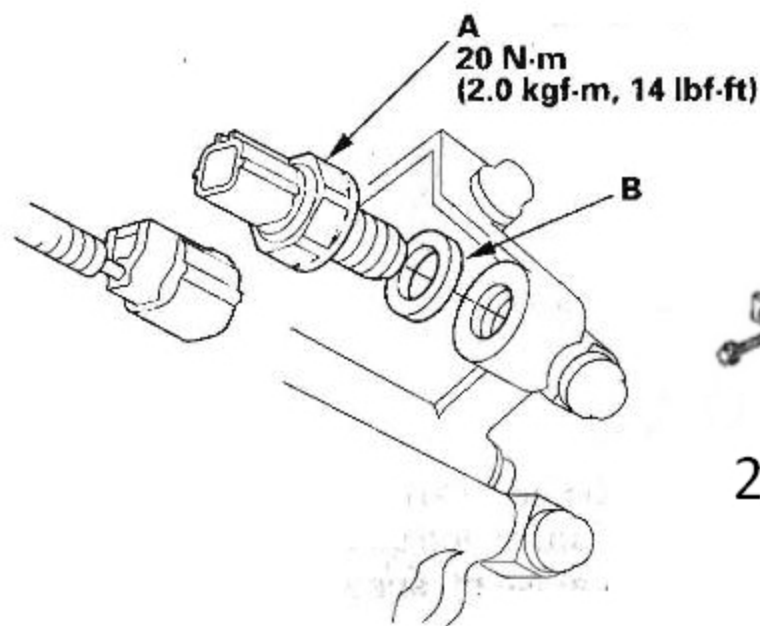

5. Make sure there is no water, oil, dust, or foreign particles inside the connector.
6. Connect the connector securely.
7. Install the splash shield.

28250-RPC-003

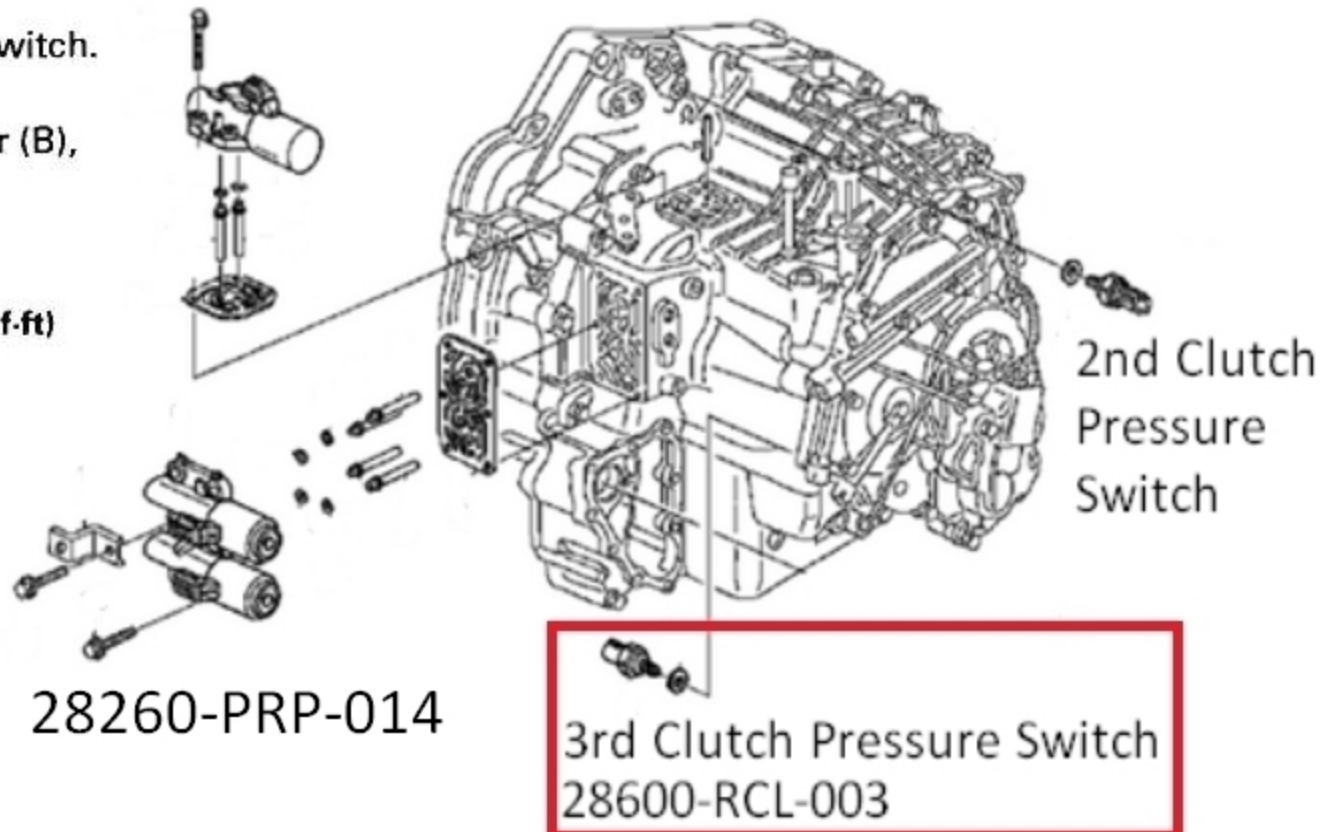

28260-PRP-014

3rd Clutch Pressure Switch
28600-RCL-003

Application:

Mode 1

Honda CR-V 2006
2nd: 28600-RCL-003
3rd: 28600-RCL-004

Mode 2

Honda Element 2007-2008
Honda CR-V 2007-2011
Acura TSX 2007-2008
2nd Clutch Pressure Switch: 28600-RCR-004
3rd Clutch Pressure Switch: 28600-RCL-003

Mode 3

Honda CR-V 2005
Acura RSX 2006
Acura TSX 2004-2006
2nd Clutch Pressure Switch: 28600-RCL-004
3rd Clutch Pressure Switch: 28600-RCL-003